




MANUAL SCREEN SERIES

Manually Operated Projector Screen User's Guide (E-Type)

Screen Installation Methods

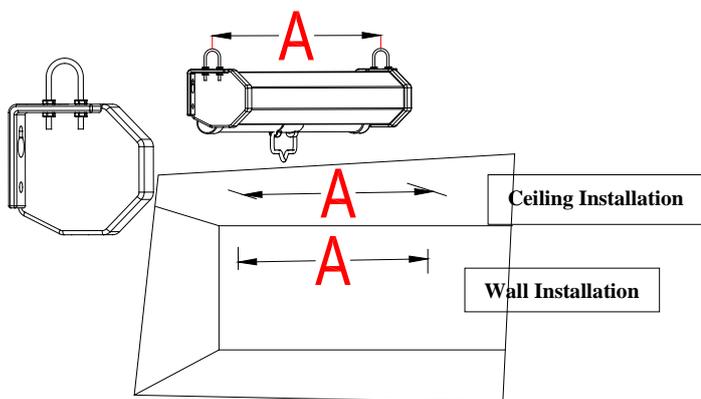


A. Flush Wall Installation

1. Measure the distance of the keyholes on the end caps and mark the location of where the screen is to be installed for the pre-drilled hole.
2. After marking the area and drilling the hole, insert the proper screw into the drilled hole and leave about 1/8" of an inch from the wall to mount the screen.
3. Mount your screen from the keyhole located on back of screen's left and right end caps.


Note: Do not remove the end caps to mount the screen to the wall.

Removing the end caps will release the tension of the internal spring mechanism.

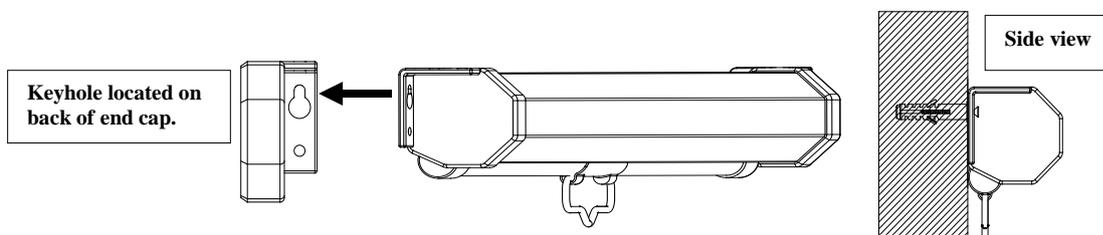


Note: No hardware is included with this screen for installation. For wall mounting in to drywall, drywall anchors and screws will suffice to sustain the weight of this screen. For any other type of wall mounting, please consult with your local hardware store to obtain the proper hardware.

B. Ceiling Installation

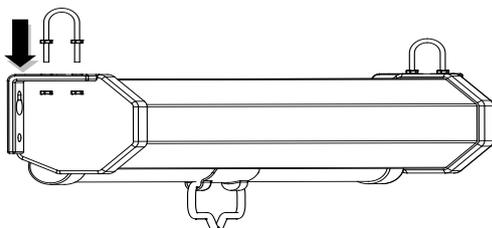

U-bolts included with Akia Manual series for suspended ceiling installation using chains and S-hooks. (Chains and S-hooks not included)

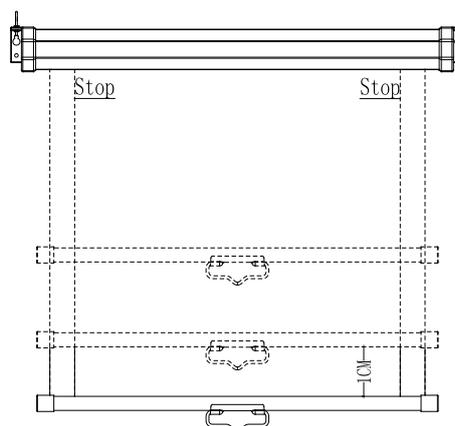

Screen Operation

1. Pull the screen down from the lanyard or from the handle only at a 90-degree angle. The screen is designed to lock at 2 inch intervals. To achieve this, make sure to pull straight down and allowing the screen to come up to lock into place. **Do not attempt to pull the screen down by the surface or touch the screen, as it will damage the screen and void the warranty.**

2. To retract the screen, simply pull the screen down more than 2 inches with a quick snap of the wrist and guide it back up in to the housing without releasing the handle.

Attention: When retracting, always pull the screen down at a 90-degree angle and *do not let go* until the screen is entirely inside the housing. If ever the screen feels stuck, keep in mind that the screen's mechanism is new and needs to be run up/down a few times to loosen up. If this happens, carefully, with a little force, yank the screen straight down to unlock the mechanism.

RETRACTION TIP: If you are not able to pull the screen down two inches when attempting to retract it, give the screen a quick yank downwards with a little bit of force. Please be sure to not stand directly under the housing of the unit when yanking down on the screen.

For more information, technical support or your local Akia Screens contact, please visit www.akiascreens.com